


<Wall/Mantle Insatallation Procedure>

1. Position liner so that bottom edge is level to bottom of wood hood. Attach liner securely to wood hood or cabinets as required using #8 screws.
2. Install blower to liner in accordance with blower units installation manual.
3. Connect duct work and electrical wiring.

<Caution>


For BUF-06W/08W, install 3/4" plywood backing and ensure to bolt in accordance with applicable installation manual. (Fig. 1)

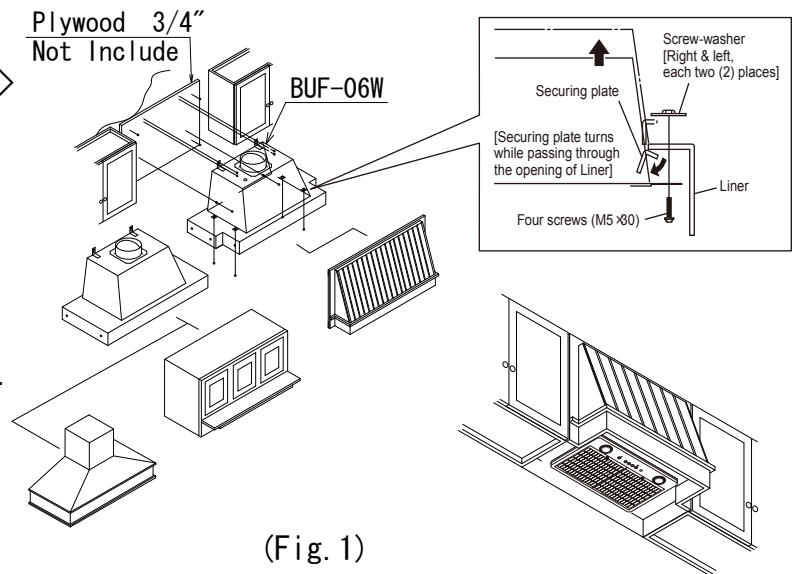


(Fig. 1)

<Island Hood Installation>

Please see details in the product installation manual. section 1 (Preparation) how to attach thread rods section 2 (Range Hood Mounting) blower, liner and wood hood installation. (Fig. 2 & 3)

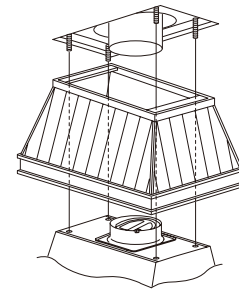

(Fig. 2)

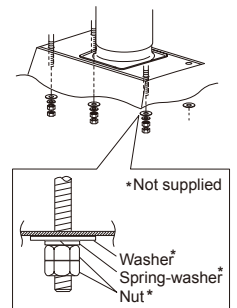

(Fig. 3)

<Connecting Wires>

Please see details in the product installation manual. section 3 (Connecting Power Supply wires)

<Check after installation>

Check ventilation at each speed control positions in accordance with operation manual section "Operating the Rangehood".

If you should require service or replacement parts on your ventilation system

Contact: Fuji Industrial USA, Inc.
16300 Christensen Rd., #212 Seattle, WA 98188
1-888-547-9880

READ AND SAVE THESE INSTRUCTIONS.
Keep this manual in a convenient place for future reference.

FUJI INDUSTRIAL CO.,LTD .