


**ASSEMBLY/INSTALLATION INSTRUCTIONS**

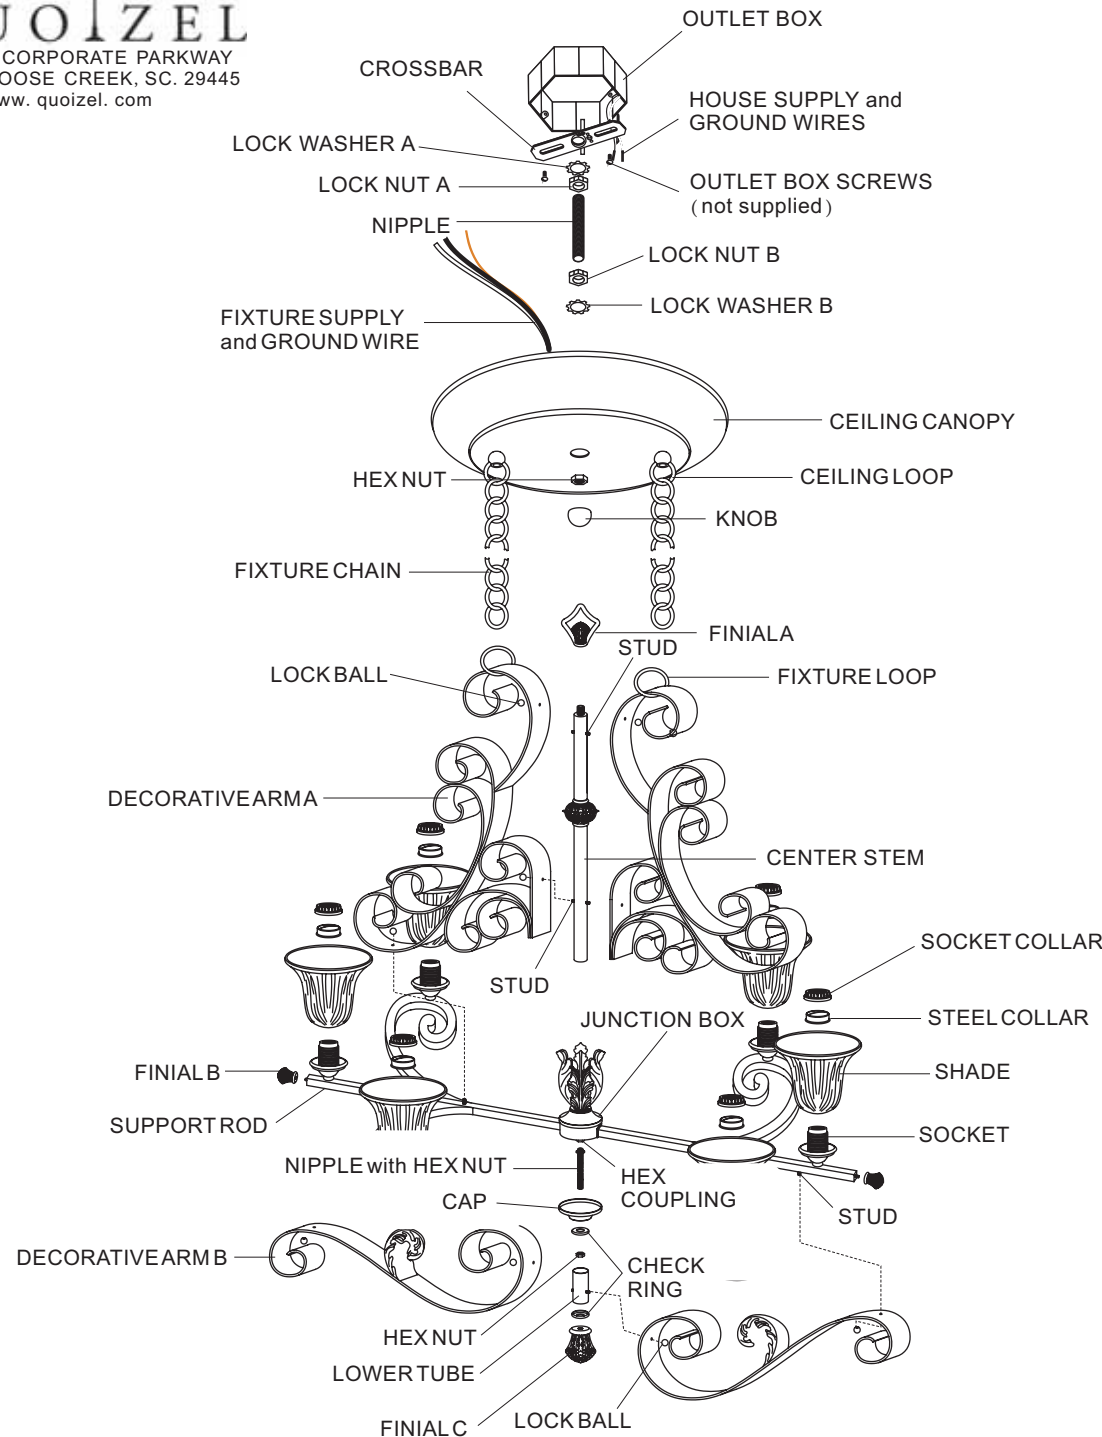

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn power to the installation point OFF at circuit breaker.
3. Thread the end of the CENTER STEM onto the nipple on the top center of the JUNCTION BOX and hand tighten until snug. Please make sure the STUDS on the tubes line up the STUDS on the top of the SUPPORT ROD while assembly.
4. Locate the NIPPLE with HEX NUT. Thread the top end of the NIPPLE into the HEX COUPLING underside of the JUNCTION BOX. Use plier, thread the HEX NUT against the HEX COUPLING and hand tighten until snug. Position the CAP and CHECK RING over the end of the NIPPLE and secure with the HEX NUT. Hand tighten until snug.
5. Position the LOWER TUBE over the end of the NIPPLE and make sure the STUDS on the side line up the STUDS on the bottom of the SUPPORT ROD. Position another CHECK RING over the end of the NIPPLE and secure with the FINIAL C. Tighten until snug.
6. Locate the DECORATIVE ARM A. Make the holes on the arms over the STUDS on the CENTER STEM. Thread the LOCK BALLS onto the STUDS and hand tighten until snug to secure the DECORATIVE ARMS. Hand tighten until snug.
7. Locate the DECORATIVE ARM B. Make the holes on it over the STUDS on the LOWER TUBE and the bottom of the SUPPORT ROD. Secure them by threading the LOCK BALLS onto the STUDS and hand tighten until snug.
8. Thread the FINIAL B onto the both ends of the SUPPORT RODS and thread the FINIAL A onto the nipple on the top end of the CENTER STEM. Hand tighten until snug.
9. Determine the hanging height of the fixture and adjust the FIXTURE CHAIN length. Please note that depending on the chain material thickness, you might be required to use chain pliers to spread links open. Attach one ends of the FIXTURE CHAINS onto the CEILING LOOP on the bottom of the CEILING CANOPY. And attache the other ends of the chains onto the FIXTURE LOOPS on the top of the fixture.
10. Fasten the CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Proceed to thread LOCK NUT A and LOCK WASHER A onto the top end of the NIPPLE. Thread the NIPPLE into the center of the CROSSBAR. Locate LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against the CROSSBAR with pliers until snug.

**FOR CANADIAN INSTALLATION - PLEASE REFER TO PAGE 2**

**11. MAKING THE WIRING CONNECTIONS:**


- (Quoizel recommends (2) people for the next 2 installations)  
 Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
12. With the proper connections made, proceed to thread LOCK NUT B and LOCK WASHER B onto the bottom of the NIPPLE. Lift the CEILING CANOPY upward and slip the center hole over the end of the NIPPLE. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure by threading the HEX NUT onto the end of the NIPPLE and hand tighten until snug. Proceed to thread the KNOB onto the NIPPLE and tighten until snug.
  13. Position the SHADE over the SOCKET as shown. Locate the STEEL COLLAR over the SOCKET and thread the SOCKET COLLAR onto the SOCKET to secure the SHADE. Hand tighten until snug.
  14. Install the correct bulbs referring to fixture markings and/or labels for maximum wattage.
  15. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
 CONSULT A LICENSED ELECTRICIAN!**

**INSTALLATION INSTRUCTIONS (FOR FIXTURES OVER 25 LBS. --Canada Only)**

Please use the information outlined in this sheet for the ceiling installation part of your fixture assembly.

**FIGURE 1**

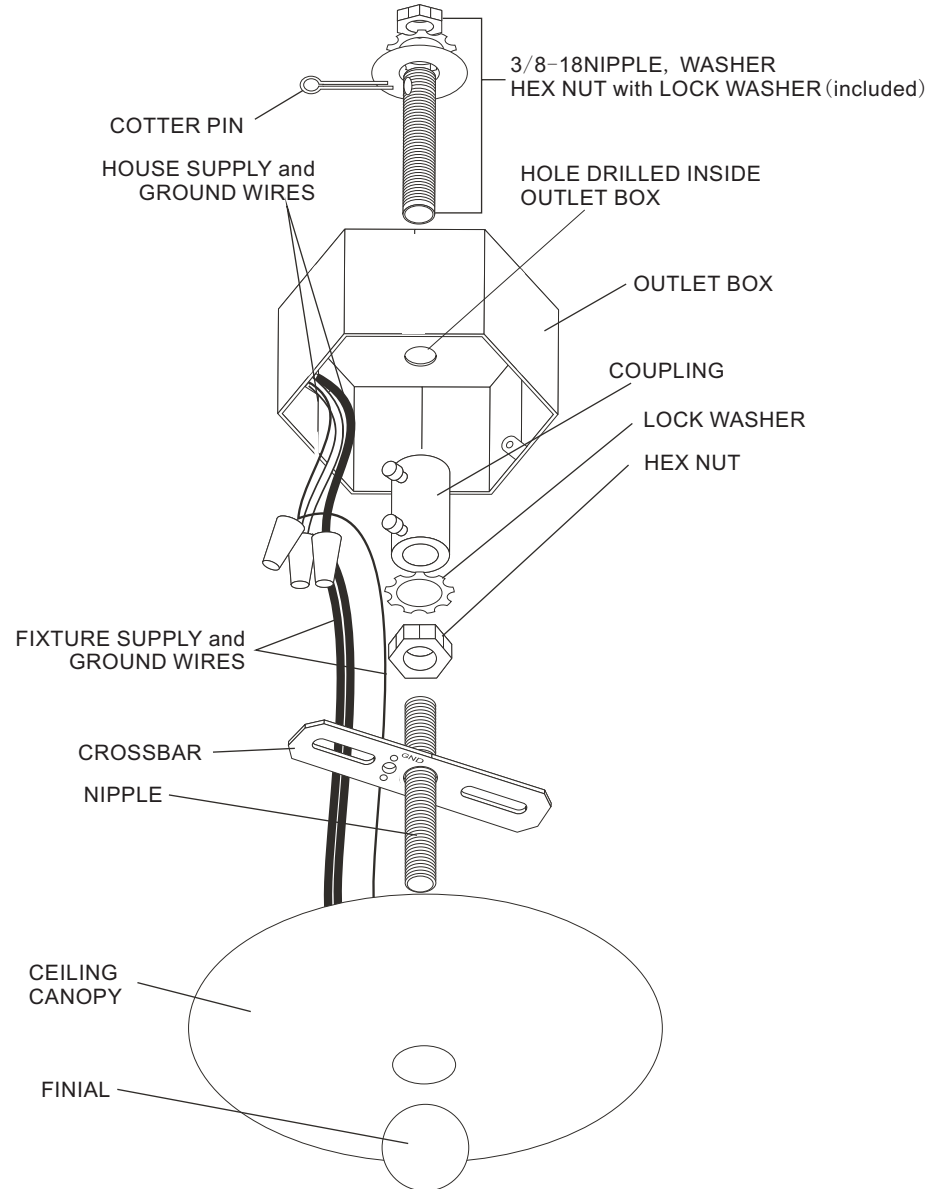

**Quoizel recommends a licensed electrician or contractor be consulted for this installation.**

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 1. Be sure the power to the installation point is OFF.
2. **The weight of this fixture will require a means of support independent of the OUTLET BOX. This fixture must be supported by 3/8-18 NPSM NIPPLE (supplied). The NIPPLE should be positioned so that 3/4" protrudes into the OUTLET BOX cavity. Note: the opposite end of the NIPPLE must be attached to a structural or bridging member of sufficient strength to support the fixture weight.** A COTTER PIN has been included and should be installed into the top of 3/8-18 NPSM NIPPLE, above HEX NUT for added safety. A clearance hole must be drilled on the inside top center of the OUTLET BOX. Please refer to Figure 2, page 3 for detailed illustration. We recommend the consultation of a licensed electrician or contractor due to the complexity of this installation.
3. With the 3/8-18 NPSM NIPPLE properly situated, locate COUPLING and proceed to thread onto the end of the NIPPLE protruding into the OUTLET BOX. Thread COUPLING onto pipe until tight. Tighten the top SET SCREW with pliers to secure COUPLING to NIPPLE. Locate the NIPPLE and thread HEX NUT onto top end. Pass LOCK WASHER over top end. Thread top end of NIPPLE into the COUPLING. Using pliers, snug HEX NUT up against the COUPLING. Tighten lower SET SCREW with pliers to secure the NIPPLE. Proceed to thread CROSSBAR and secure it onto OUTLET BOX by (2) OUTLET BOX SCREWS (not supplied).
4. Turn back to STEP 11, PAGE 1 for rest installations.

**FIGURE2: CRAWL SPACE/ATTIC CUT-AWAY**

