



 
 
 
 




 

 
 


STYLE NO. MS6312A/MS6312B

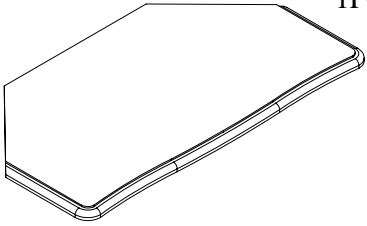 
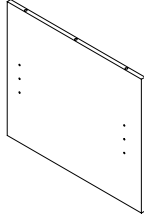 
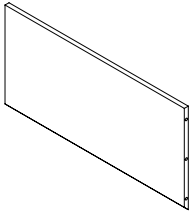 
 
CORNER TV/VCR STAND

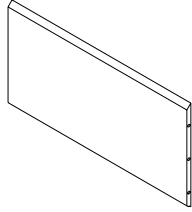 
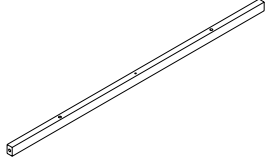 
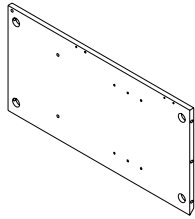 
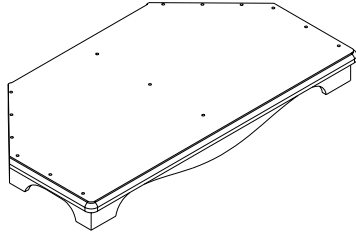 
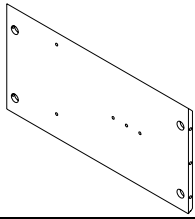 
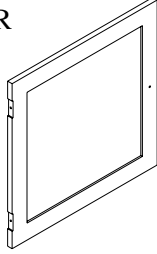 
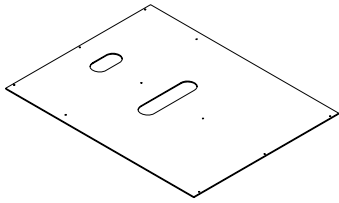 
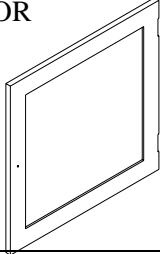 
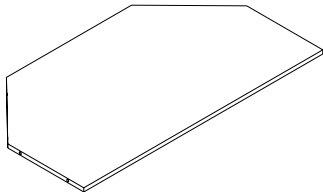 
SOUTHERN ENTERPRISES INC.

RELAX...If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING PACKING MATERIAL.

HARDWARE LIST			
(1) WOOD DOWELS	18PCS	(8) LARGE FLAT HEAD WOOD SCREW	1PC
			
(2) CAM-BOLTS	24PCS	(9) HINGES	4PCS
			
(3) CAM-LOCKS	24PCS	(10) SHELF SUPPORTS	10PCS
			
(4) COVERS	24PCS	(11) MACHINE SCREWS	2PCS
			
(5) WRENCH	1PC	(12) METAL PLATES	2PCS
			
(6) MAGNETS	2PCS	(13) METAL HANDLES	2PCS
			
(7) SMALL FLAT HEAD WOOD SCREWS	20PCS	(14) PAN HEAD WOOD SCREWS	14PCS
			

PARTS LIST			
(A) TOP PANEL	1PC	(H) DIVIDER	1PC
			
(B) LEFT SIDE PANEL	1PC	(I) ADJUSTABLE SHELF	2PCS
			

<p>(C) LEFT BACK PANEL 1PC</p> 	<p>(J) CROSS BRACE 1PC</p> 
<p>(D) RIGHT SIDE PANEL 1PC</p> 	<p>(K) BASE 1PC</p> 
<p>(E) RIGHT BACK PANEL 1PC</p> 	<p>(L) LEFT DOOR 1PC</p> 
<p>(F) MIDDLE BACK PANEL 1PC</p> 	<p>(M) RIGHT DOOR 1PC</p> 
<p>(G) FIXED SHELF 1PC</p> 	

ASSEMBLY INSTRUCTION

1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIP SCREWDRIVER.
3. INSERT WOOD DOWEL (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON FIXED SHELF (G) AND FIT INTO CORRESPONDING HOLES ON EDGE OF DIVIDER (H). INSERT CAM-LOCKS (3) INTO LARGE HOLES ON DIVIDER (H) WITH ARROW FACING TOWARDS HOLE. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2) BY USING WRENCH (5). PUSH COVERS (4) INTO CAM-LOCKS (3). TIGHTEN PAN HEAD WOOD SCREWS (14) THROUGH ENDS OF MAGNETS (6) INTO PREDRILLED HOLES ON FIXED SHELF (G). AS SHOWN IN FIGURE 1.
4. INSERT WOOD DOWELS (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON RIGHT SIDE PANEL (D) AND FIT INTO CORRESPONDING HOLES ON ENDS OF FIXED SHELF (G), CROSS BRACE (J). INSERT CAM-LOCKS (3) INTO LARGE HOLES ON UNDERSIDE OF FIXED SHELF (G) WITH ARROW FACING TOWARDS HOLE. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2) BY USING WRENCH (5). PUSH COVERS (4) INTO CAM-LOCKS (3). ASSEMBLE PARTS (B, C, E) IN SAME MANNER. AS SHOWN IN FIGURE 2.

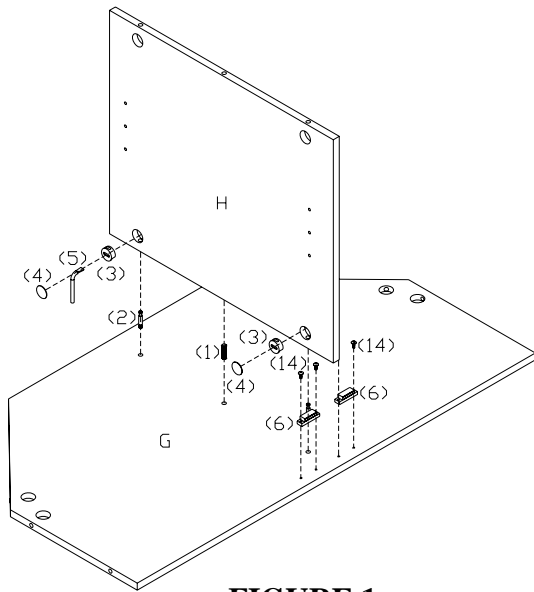 


FIGURE 1

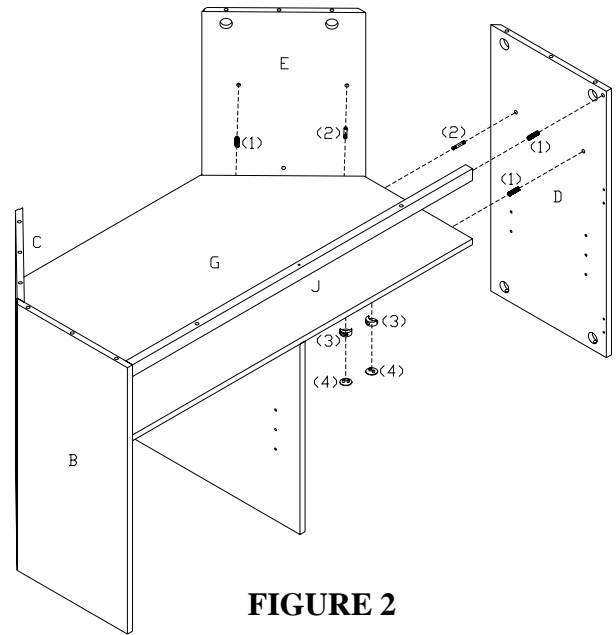 


FIGURE 2

5. INSERT WOOD DOWELS (1), CAM-BOLTS (2) INTO PREDRILLED HOLES ON BASE (K), WITH AN ASSISTANT, FIT WOOD DOWELS (1) AND CAM-BOLTS (2) INTO CORRESPONDING HOLES ON BOTTOM EDGES OF PARTS (B, C, D, E, H). INSERT CAM-LOCKS (3) INTO LARGE HOLES ON PARTS (B, C, D, E, H) WITH ARROW FACING TOWARDS HOLE. ROTATE CAM-LOCKS (3) CLOCKWISE TO SECURE CAM-BOLTS (2) BY USING WRENCH (5). PUSH COVERS (4) INTO CAM-LOCKS (3). ASSEMBLE TOP PANEL (A) IN SAME MANNER, AND TIGHTEN LARGE FLAT HEAD WOOD SCREW (8) THROUGH PREDRILLED HOLE ON CROSS BRACE (J) INTO TOP PANEL (A). AS SHOWN IN FIGURE 3 & 4.

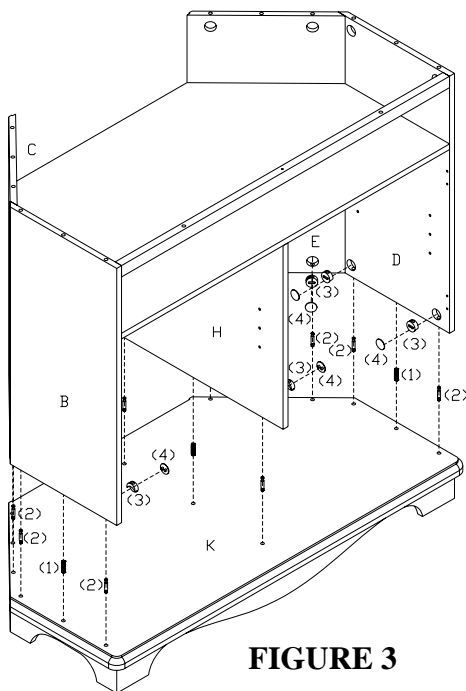 


FIGURE 3

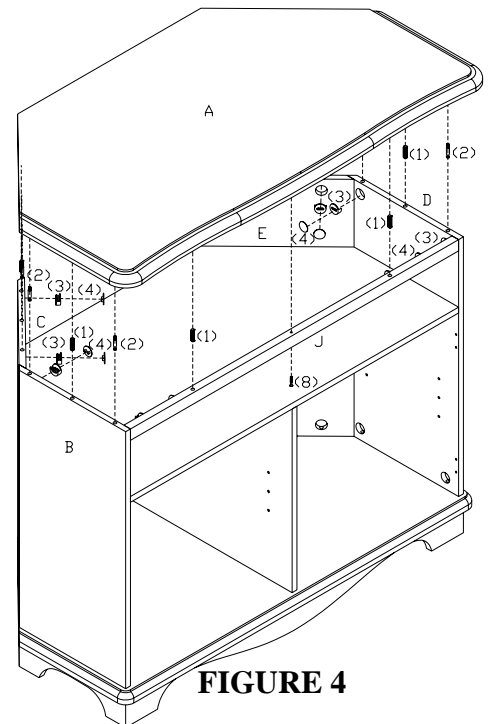 


FIGURE 4

6. ATTACH MIDDLE BACK PANEL (F) INTO SLOTS ON PARTS (A, C, E, K). INSERT PAN HEAD WOOD SCREWS (14) THROUGH PREDRILLED HOLES ON MIDDLE BACK PANEL (F) AND TIGHTEN INTO REAR EDGES OF PARTS (A, C, E, K). AS SHOWN IN FIGURE 5

7. INSERT SMALL FLAT HEAD WOOD SCREWS (7) THROUGH HINGES (9) AND TIGHTEN INTO PREDRILLED HOLES ON DOORS (L, M). AND ATTACH DOORS (L, M) TO SIDE PANELS (B, D). TIGHTEN SMALL FLAT HEAD WOOD SCREWS (7) THROUGH HINGES (9) INTO CORRESPONDING HOLES ON SIDE PANELS (B, D). INSERT MACHINE SCREWS (11) THROUGH PREDRILLED HOLES ON DOORS (L, M), METAL PLATES (12) AND TIGHTEN INTO METAL HANDLES (13). AS SHOWN IN FIGURE 6.

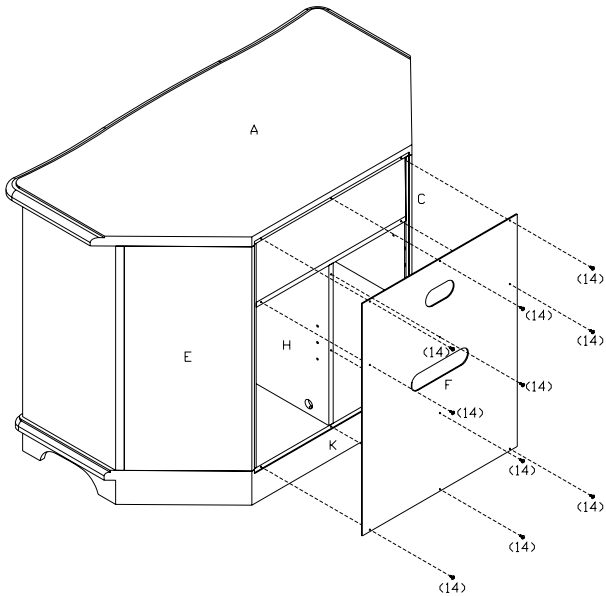 


FIGURE 5

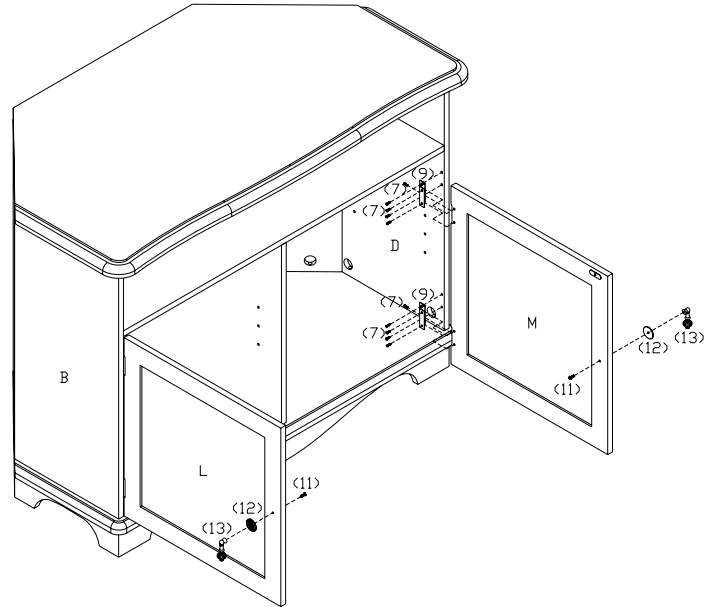 


FIGURE 6

8. FIT SHELF SUPPORTS (10) INTO PREDRILLED HOLES ON INSIDE OF LEFT AND RIGHT SIDE AND BACK PANELS (B, C, D, E). PUT ADJUSTABLE SHELVES (I) ONTO SHELF SUPPORTS (10). AS SHOWN IN FIGURE 7.

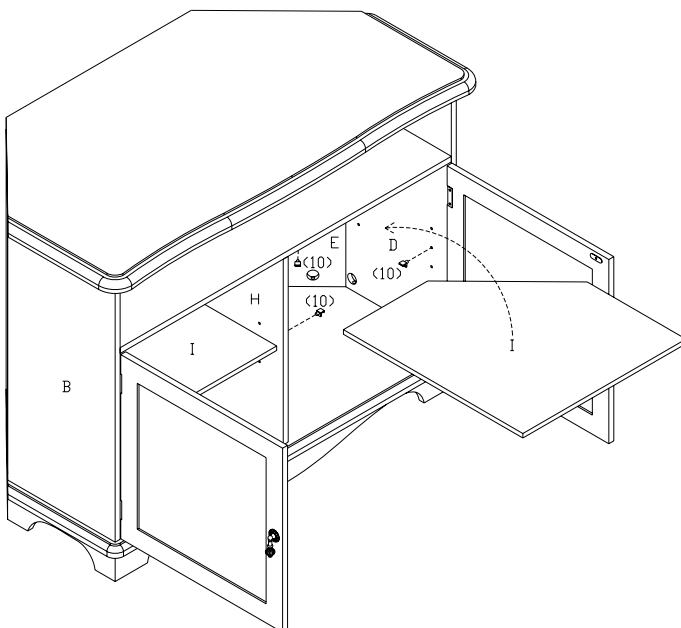 
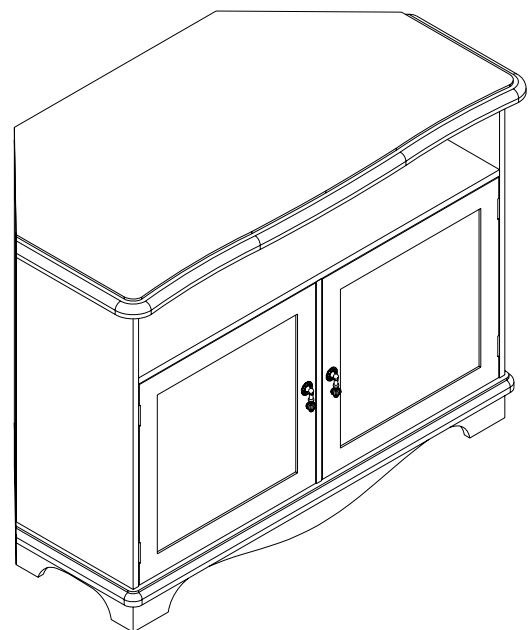 


FIGURE 7




READY

YOUR NEW CORNER TV/VCR STAND IS FINISHED AND READY TO USE.

Please count, identify and compare parts and hardware list to be sure all parts are present. It may help to divide parts and label them to correspond with part list. Extra hardware may be included. If any items are missing, please contact our parts/service department at (800) 633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time. Missing or damaged hardware and/ or parts will be replaced free of charge.

WE DO NOT SELL PARTS. WE DO NOT RECOMMEND MODIFYING PRODUCT(S) AND WE ARE NOT RESPONSIBLE FOR ANY DAMAGES DUE TO PRODUCT MODIFICATION(S). If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled.

"We will ship parts if available" "This is not a warranty"

PARTS REPLACEMENT FORM			
STYLE NO: MS6312A/MS6312B			
Customer Name	PARTS LETTER	PART DESCRIPTION	QUANTITY NEEDED
Street, City, State, Zip			
Phone#			
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  </div> <div style="width: 60%;"> <p style="margin: 0;">Please indicate where you purchased this item.</p> <p style="margin: 0;">Store/website/catalog</p> <p style="text-align: center; margin: 5px 0 0 0;">/ /</p> <p style="margin: 0;">Please indicate color/size/style number</p> <p style="text-align: center; margin: 5px 0 0 0;">/ /</p> </div> </div>			
SOUTHERN ENTERPRISES INC. P.O. Box 59996 Dallas, Texas 75229			