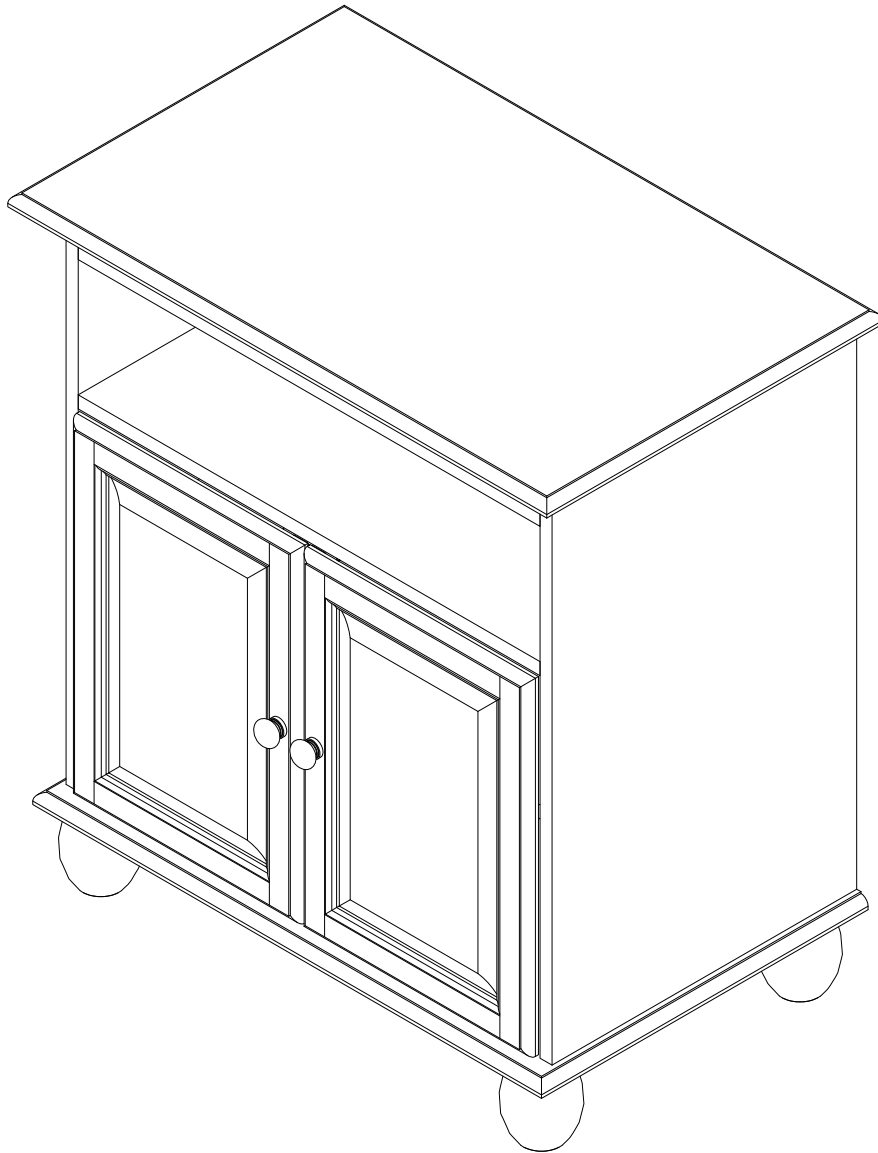 


MS7036 – Swivel top media stand

Assembly Instructions



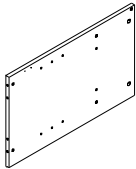 
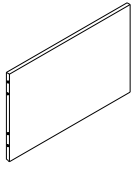 
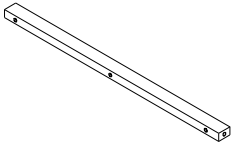 
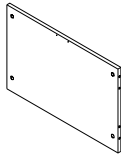 
 
 
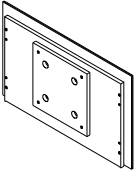 
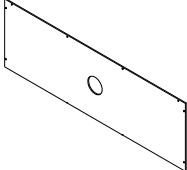 
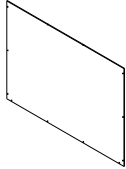 
 
 
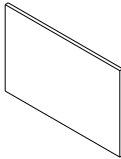 

 
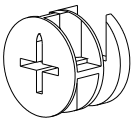 
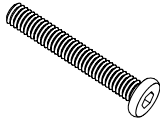 
For assistance with assembly contact:
Southern Enterprises, Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com



Swivel top media stand


 

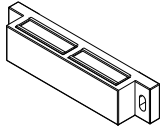 
 
 
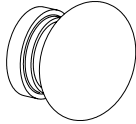 
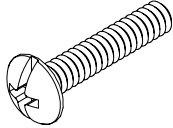 
 
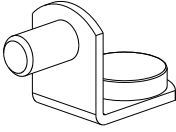 

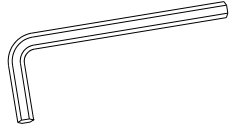 
Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Screws shown in actual size. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below (SHOWN ACTUAL SIZE). You may receive extra hardware with your unit.


1  Left side panel	2  Right side panel
3  Front upper brace	4  Shelf
5  Bottom panel	6  Leg
7  Top panel	8  Upper back panel
9  Lower Back panel	10  Left door
11  Right door	12  Adjustable shelf
A  Cam Bolt	B  Wood Dowel
 Cam-Lock	D  Socket Hexagon Screw

Swivel top media stand

Assembly Instructions

<p>E Quantity of 4</p> <div style="text-align: center;"></div> <p>Cam Nut</p>	<p>F Quantity of 22</p> <div style="text-align: center;"></div> <p>Round Head Screw</p>
<p>G Quantity of 18</p> <div style="text-align: center;"></div> <p>Flat Head Screw</p>	<p>H Quantity of 1</p> <div style="text-align: center;"></div> <p>Magnet Lock</p>
<p>I Quantity of 2</p> <div style="text-align: center;"></div> <p>Magnetic Plate</p>	<p>J Quantity of 4</p> <div style="text-align: center;"></div> <p>Hinge</p>
<p>K Quantity of 2</p> <div style="text-align: center;"></div> <p>knob</p>	<p>L Quantity of 2</p> <div style="text-align: center;"></div> <p>Long Bolt</p>
<p>M Quantity of 3</p> <div style="text-align: center;"></div> <p>Flat Head Screw</p>	<p>N Quantity of 4</p> <div style="text-align: center;"></div> <p>Shelf Holder</p>
<p>O Quantity of 2</p> <div style="text-align: center;"></div> <p>Connecting plate</p>	<p>P Quantity of 1</p> <div style="text-align: center;"></div> <p>Socket Head Wrench</p>
<p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish . Avoid rubbing or scratching the surface with rough or abrasive objects.</p>	<p>For replacement parts or questions, please Call Customer Service at 1-800-633-5096 Do not return product to store, please call Manufacturer for assistance, questions or Parts.</p>

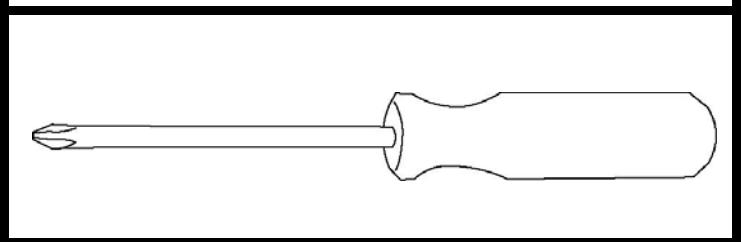 Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



Swivel top media stand

Assembly Instructions

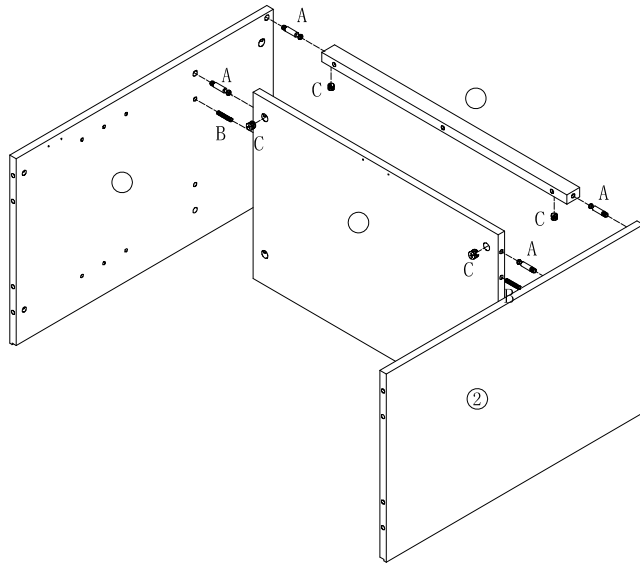 


Figure 1

Assembly Instructions:

Wood may scratch easily, Be careful when assembling. Do not scratch.

Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Connect the Left/Right side panel, Front upper brace and Shelf /(1)/(2)/(3)/(4), use 6pcs cam bolt (A) and 4pcs wood dowel (B), then rotate 6pcs cam lock(C) clockwise to fix cam locks (A) until completely tighten by a wrench

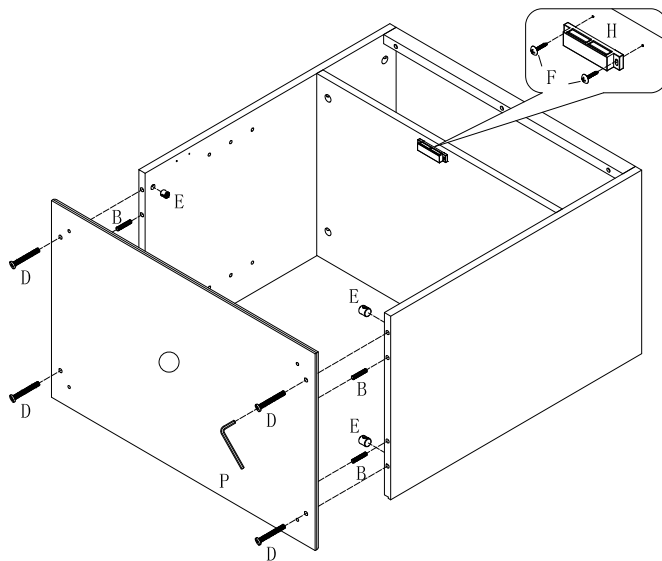 


Figure 2

Connect bottom panel (5) to the unit assembled at step 1 use 4pcs wood dowel(B), 4pcs cam nut(E) and 4pcs Socket Hexagon Screw (D),tighten them by Allen wrench (P).

Attach 1pc Magnet Lock(H) to the shelf panel (4) use 2pcs Round Head Screw (F);

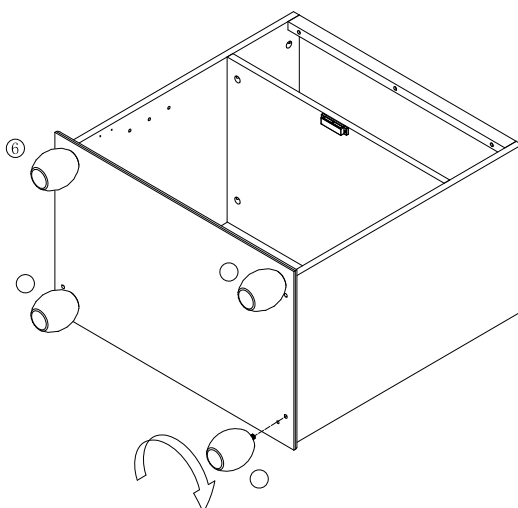 


Figure 3

Insert 4pcs legs(6) to the unit assembled at step 2, then tighten them clockwise.

Swivel top media stand

Assembly Instructions

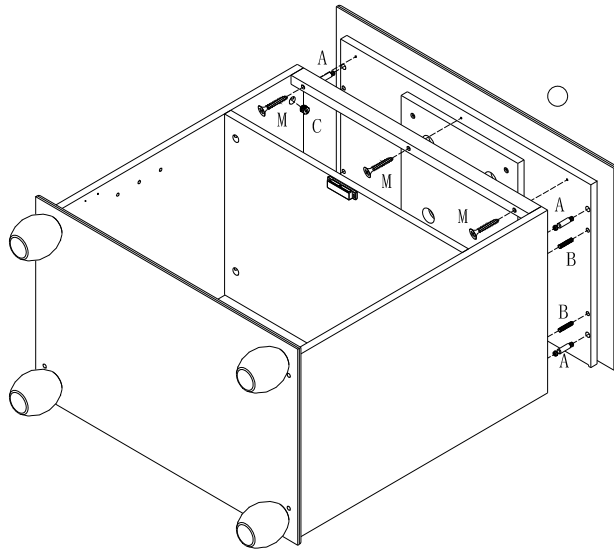 


Figure 4

Attach Top panel (7) to the unit assembled at step 3, Use 4pcs cam bolt(A) and 4pcs wood dowel(B), then rotate 4pcs cam lock(C) clockwise to fix cam locks (A) until completely tighten by a wrench.

Connect the Upper brace(3) and top panel(7) use 3 pcs Flat Head Screw (M)

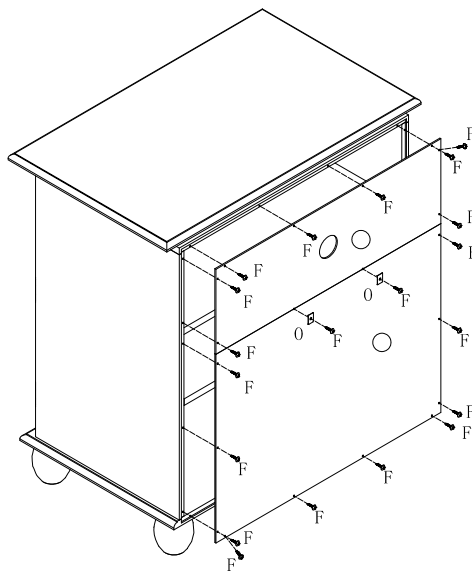 


Figure 5

Connect the back panel (8)/(9) with 18 pcs round head screw(F), then fix 2pcs Connecting plate (O) to the back panel with 2pcs round head screw(F)

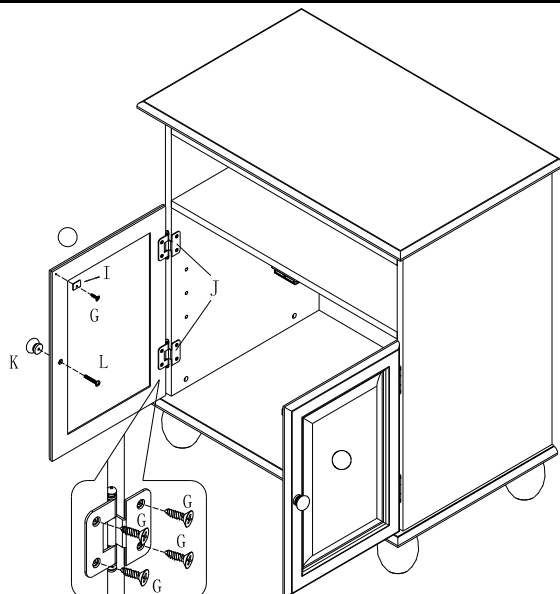 



Figure 6

Connect the door (10) with left side panel(1) with 2pcs hinge(J) and 8pcs flat head screw (G); Fix knob(K) to the door(10) use 1pc long bolt(L); The same way to assemble the right side door(11)

Then attach 2pcs Plate(I) to Left /right door (10)/(11) with 1pc flat head screw(G)

Swivel top media stand

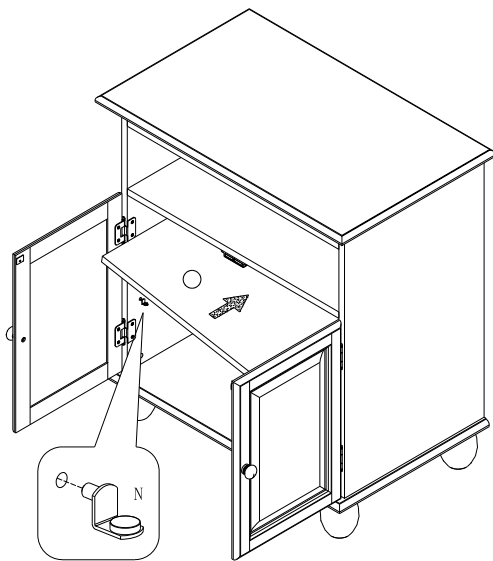 Assembly Instructions



Insert 4pcs shelf holder(N) into the hole of left/right side panel, then put adjustable shelf(11) on it.

Figure 7



Customer Service 1-800-633-5096

Southern Enterprises, Inc.
2915 Merrell Road
Dallas, Texas 75229

MS7036 - Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No

Parts Letter

Parts Description

Quantity Needed

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled.