


euø style™

Assembly Instructions

Veronica Desk

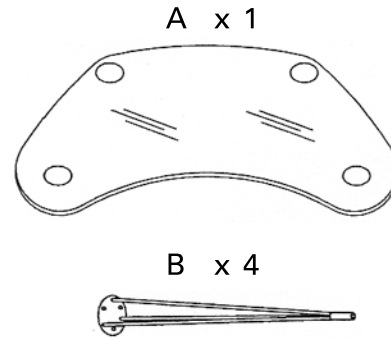

A x 1

B x 4



C x 4



D x 4



Allen Wrench

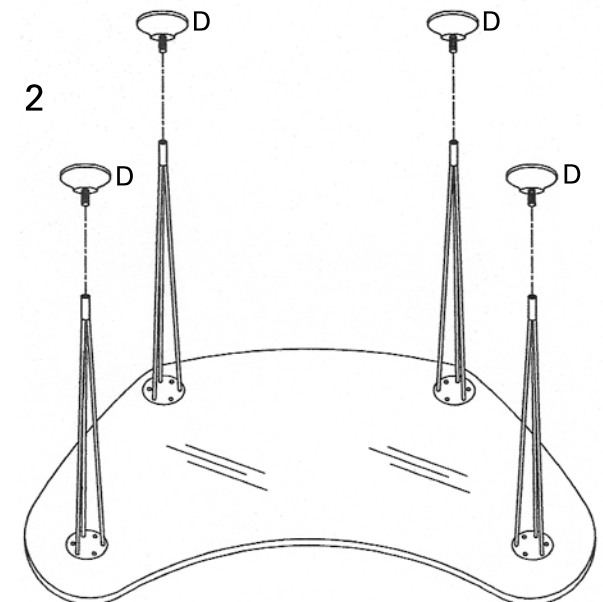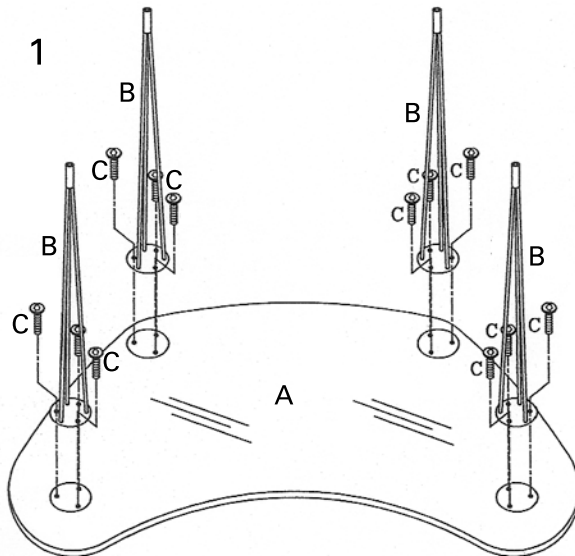

PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer, or fax Euro Style at 415-455-8033. During assembly, **hand tighten** screws only. When all screws are in place, then tighten completely.