

TRANSFORMER USE ONLY.

The London / Striker bell is powered by an 8-12 volt 1 amp transformer (not supplied)

Wire the bell to terminals 2 & 3 as shown in diagram.

For London bells.

Replace the wooden cover and mount to the wall, screwing through the holes provided at the top of the London Bell. Fix the bell to the wall using the screws & plugs supplied.

For Striker bells.

Replace the chrome cover and mount to the wall, Using the wall fixing holes shown opposite. Fix the bell to the wall using the screws & plugs supplied.

IMPORTANT
DO NOT WIRE DIRECTLY TO THE MAINS.
IF IN DOUBT PLEASE CONSULT A
QUALIFIED ELECTRICIAN.

