




UTTERMOST

# Assembly Instruction

## ITEM#23020


**Component List:**

- A.Chaise. . . . . 1pc.
- B.Front Leg. . . . . 4pcs.
- C.Back Leg. . . . . 2pcs.
- D.Plastic Washer. . . . 4pcs.

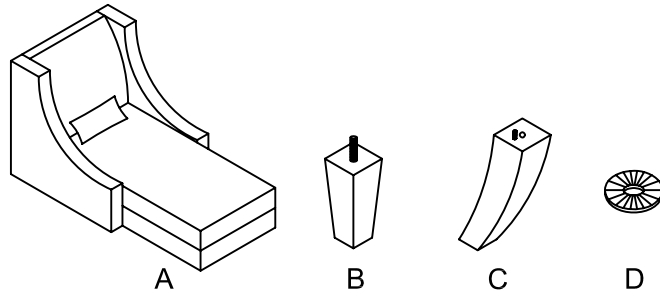


**Hardware List:**

- 1.Bolt. . . . . 2pcs.
- 2.Flat Washer. . . . . 2pcs.

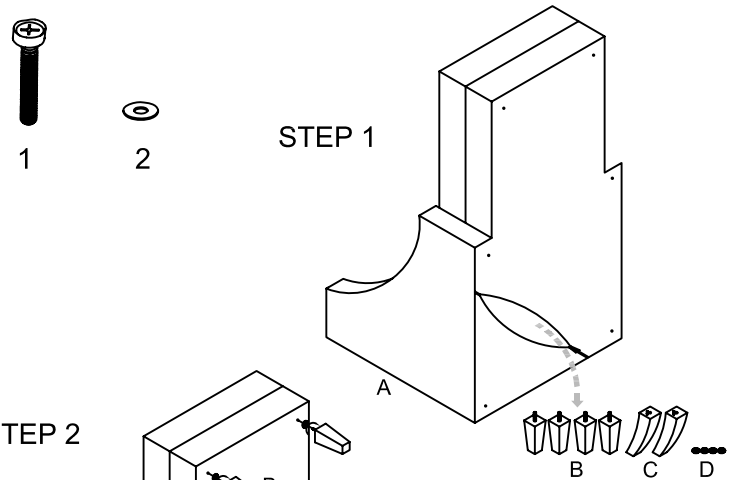


**Step 1.** Put the **Chaise (A)** on a soft, clean place as shown. Unzip the compartment located on the bottom of **Chaise (A)**. Remove the **Front Legs (B)**, **Back Legs (C)** and **Plastic Washer (D)** packed inside. Close zipper.

**Step 2.** Screw the **Front Legs (B)** along with **Plastic Washer (D)** to the bottom of arms as shown. Tighten **Bolt (1)** into **Flat Washer (2)** and **Back Leg (C)** to the bottom of center with Phillips screwdriver (not provide) as shown.

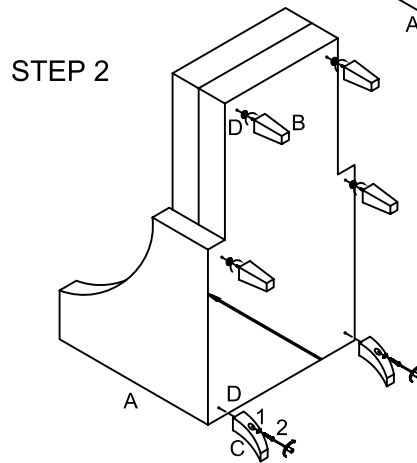

**Step 3.** Turn **Chaise (A)** upright.

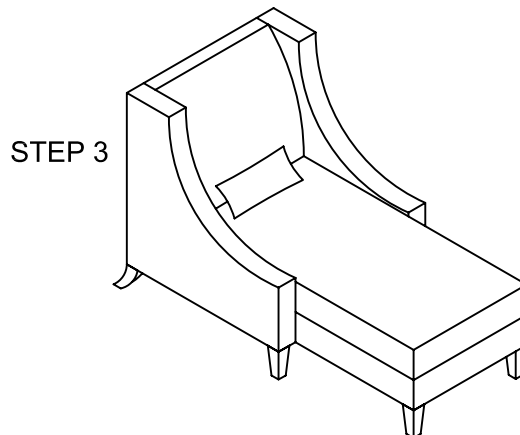

Assembly is complete now.  
Thank you for your purchase.