


When dimming fixtures with "toroidal" type transformers a buzzing noise can be a side effect. (Toroidal transformers are donut shaped). A dimming coil will significantly reduce buzzing.

Always use a dimmer rated specifically for "Magnetic Low Voltage" when dimming any fixture with a magnetic transformer.

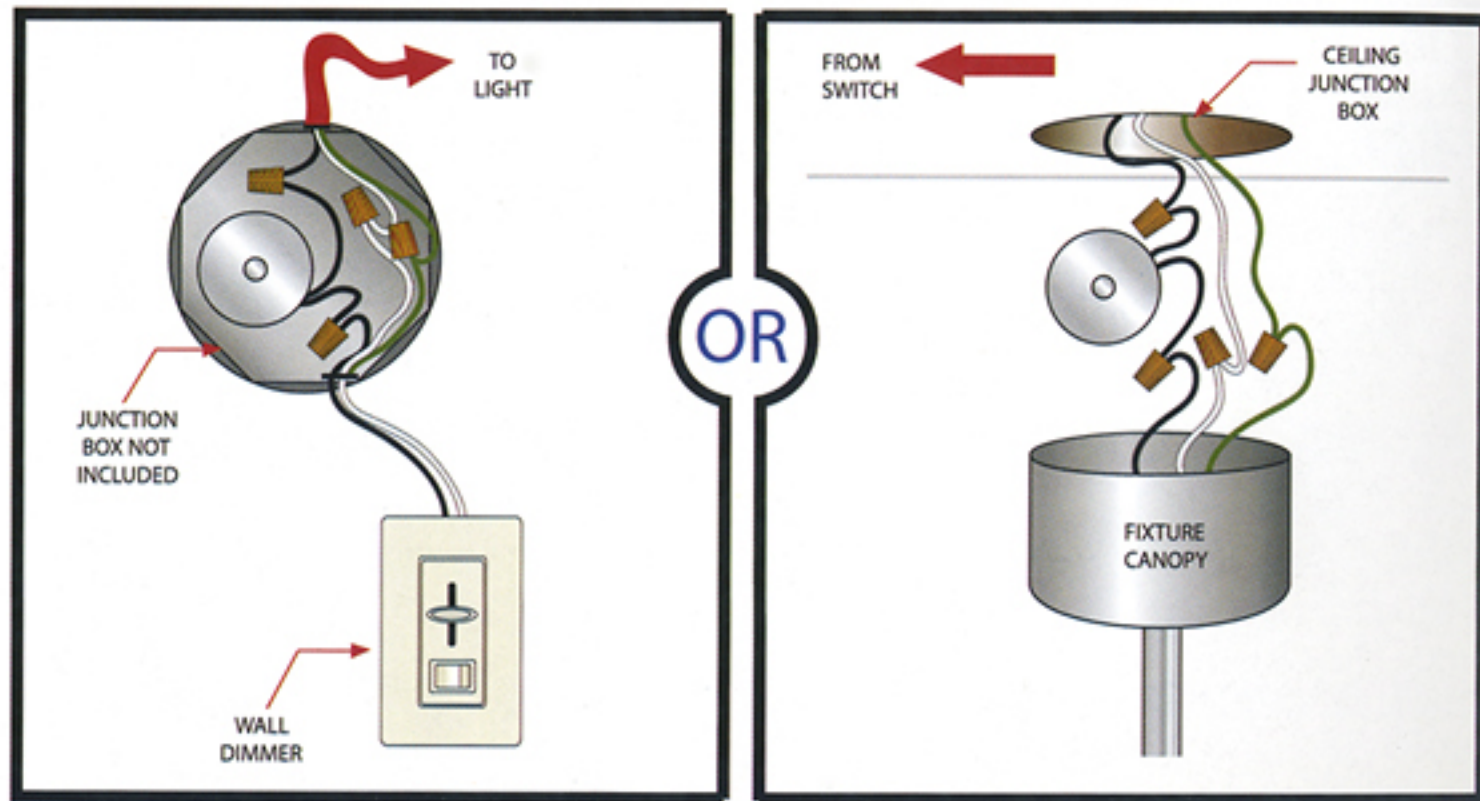

The dimming coil gets installed in the "hot" wire anywhere between the dimmer and the transformer. The coil should be mounted inside a junction box. Connect one lead to the output from the dimmer and connect other lead to the input of the transformer.