



PRIORI XENON

INSTALLATION EXAMPLES


Hardwire Installation:

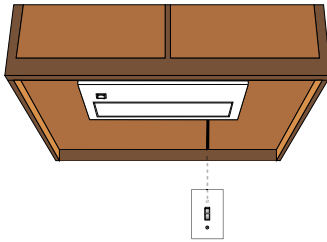

Hardwire Installation with Junction Box:

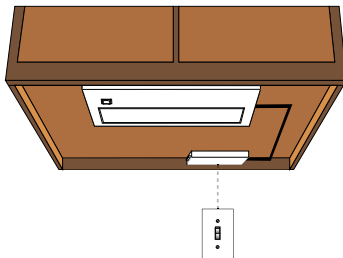

Cord and Plug Installation:

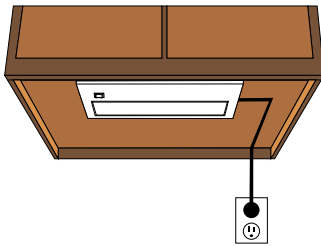

LAYOUT EXAMPLES

Figure 1


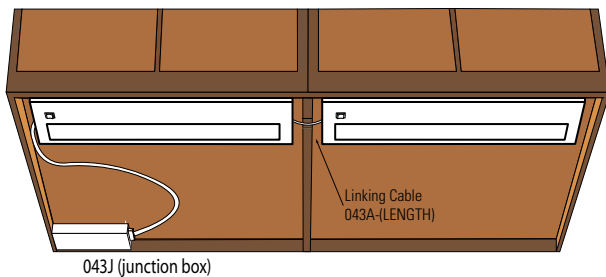


Figure 2

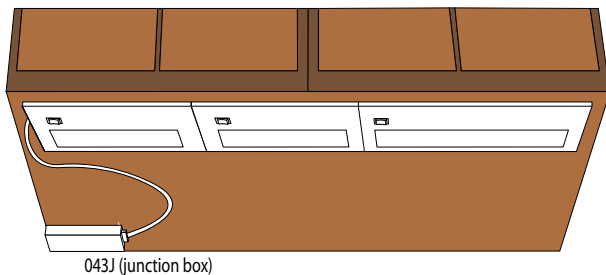

Note: Fixtures can be installed so they connect end-to-end, directly into each other in a single “bank” (Figure 2) or multiple fixtures can be linked with linking cables (Figure 1), sold separately.

BILL OF MATERIALS

See layout examples at left and accessories list on facing page for assistance in determining a bill of materials.

- Determine installation type (see examples at left)
- Order 043J separately for hardwire system with junction box
- Order 043A-PC6 separately for cord and plug system
- No additional accessories are required for a hardwire system when not using the optional junction box
- Determine layout (see examples at left)
- Order 043A jumper cables separately (Figure 1) (no additional parts necessary for end-to-end installation as shown in Figure 2)

Lamps are included with each fixture.

! Do not interconnect more than 600 watts (30 lamps x 20 watts each) in any single installation.

Bill of materials for Figure 1:

- (2) 043X-3-WH
- (1) 043J-WH
- (1) 043A-12-EX-WH

Bill of materials for Figure 2:

- (2) 043X-1-WH
- (1) 043X-2-WH
- (1) 043J-WH